 


PURE


One Mi
Series 2

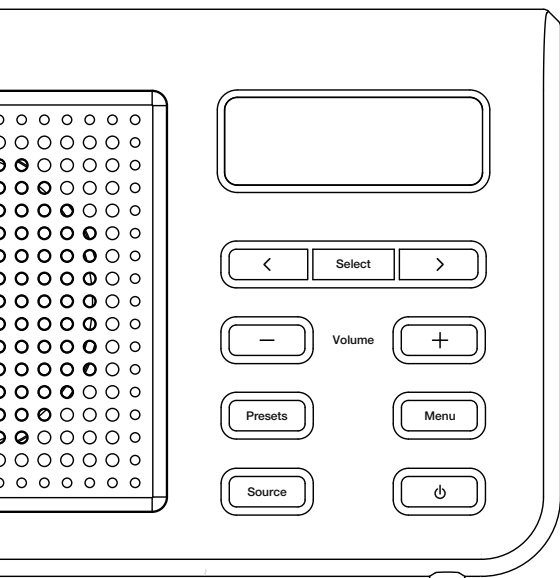

One Mi

Series 2

 Thank you for choosing One Mi Series 2. This manual will help you get your product up and running in no time and explains how to get the best out of all its great features. If you need any further assistance, please visit the support pages on our website at www.pure.com.

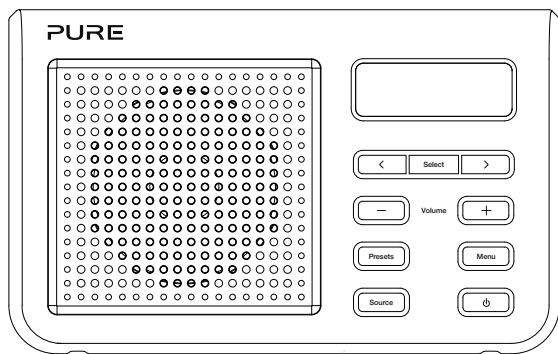

Safety Instructions

1. Keep the radio away from heat sources.
2. Do not use the radio near water.
3. Avoid objects or liquids getting into the radio.
4. Do not remove screws from or open the radio casing.
5. Fit the mains adapter to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.
6. Always switch the unit off and disconnect it from mains power before inserting or removing a ChargePAK.
7. Should not be immersed in water, used in shower or bathroom if plugged into the mains.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at <http://support.pure.com>.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

One Mi Series 2, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright

Copyright © 2012 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 1 April 2012.

Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Contents

4 Product Overview

- 4 Controls
- 5 Display
- 5 Side connectors

6 Getting started

- 6 Position aerial
- 6 Connect power
- 7 Select language
- 7 Autotune
- 7 Adjusting the volume

8 Listening to radio

- 8 Selecting digital radio
- 8 Changing digital station
- 8 Selecting FM radio
- 8 Seek tuning
- 8 Manual tuning

9 Using radio presets

- 9 Storing a radio preset
- 9 Selecting a radio preset

10 Basic options

- 10 Autotune
- 10 Display information
- 10 Using textSCAN to pause and control scrolling text
- 11 Changing the time format
- 11 Changing the language

12 Advanced options

- 12 Version
- 12 Upgrade
- 12 Reset

 
13 Installing a ChargePAK A1

14 Technical specifications


16 Pure Warranty Statement for Australia

Product Overview


Controls

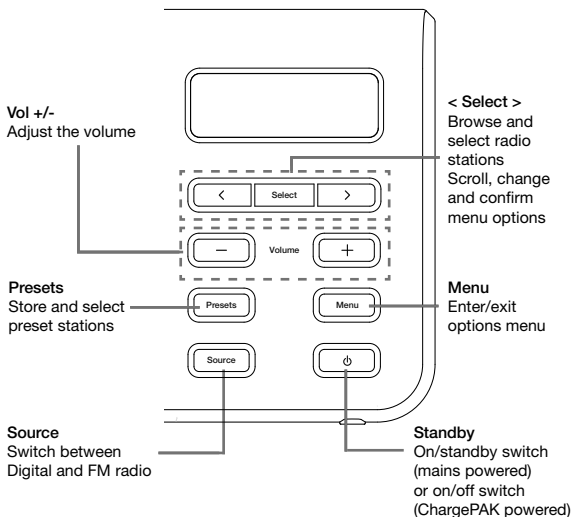

Display

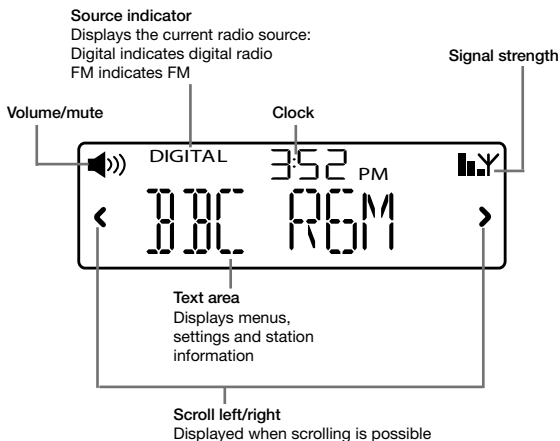 


Side connectors

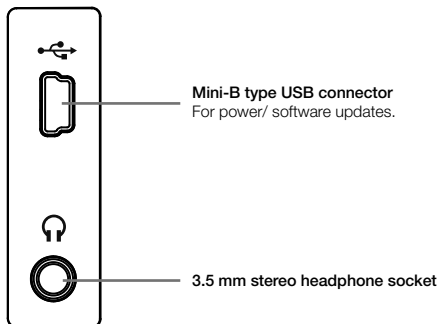 

Getting started

Position aerial

 
Unclip the aerial and fully extend it (steps **A** and **B**).

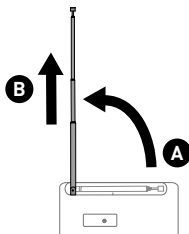

Connect power

Note: If you have a ChargePAK A1 rechargeable battery (sold separately) fit it now before plugging One Mi in. See page 13 for more information.

 
1. Insert the jack of the supplied mains adapter into the USB socket on the side of the radio (**C**).
2. Plug the mains adapter into the mains supply (**D**).

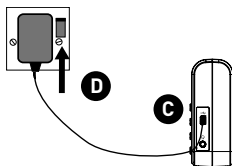



Select language

 1. Press **Select**.
2. Use the Select scroll < > buttons to view the different language options.
3. Press **Select** to choose the language shown.



Autotune

 
One Mi will perform an autotune for digital stations and tune to a station when complete. The number of stations found is displayed during an autotune.



Adjusting the volume


Use the Volume + - buttons to adjust the volume level.

Listening to radio




Selecting digital radio

 Press **Source** until 'DIGITAL' is displayed on the screen.




Changing digital station

 1. Scroll **< >** to the required station.
2. Push **Select** to tune into the station.




Selecting FM radio

 Press **Source** until 'FM' is displayed at the top of the screen.



Seek tuning

 Hold either the scroll up or scroll down buttons **< >** until One Mi starts to automatically scan for the next station. The scan will stop when a station with a strong signal is found.



Manual tuning

Scroll **< >** to the required frequency.

Using radio presets

 
Store up to 8 digital and 8 FM radio stations for quick access.



Storing a radio preset

1. Tune into the station that you want to store.
2. Press **Presets** so that the < > symbols are shown on the display.
3. Scroll < > to the required Preset (1-8).
4. Press and hold **Select** until 'Saved' is displayed on the screen to store the radio station as a preset.

Note: To overwrite a radio preset, tune into the station that you want to store and select the preset that you want to overwrite at step 3.



Selecting a radio preset

1. Press the **Presets** button.
2. Scroll < > to the station that you want to listen to.
3. Press **Select** to tune into the station.



Basic options



 
Autotune

You can use the autotune function to automatically scan for new digital radio stations and remove inactive ones.




Note: Autotune is only available when you have selected 'Digital' as the radio source.

1. Press **Menu**.
2. Scroll < > to 'Autotune'.
3. Press **Select**.
4. When the autotune has finished, One Mi will tune to the last station that you were listening to.




Display information

 
1. Press **Menu**.
2. Scroll < > to 'Display'.
3. Press **Select**.
4. Use the scroll < > buttons to switch the display between the station name, the date, and scrolling text from the radio station.



 Using textSCAN to pause and control scrolling text




 1. When 'Scrolling text' information is displayed in either digital or FM radio, press **Select** to pause the scrolling text.
2. Press the scroll buttons < > to move the text to the left or right.
3. Press **Select** to exit textSCAN.



Changing the time format

 
1. Press **Menu**.
2. Scroll < > to '12/24hr'.
3. Press **Select**.
4. Use the scroll < > buttons to the time format between 12 and 24 hours.
5. Press **Select**.



Changing the language


1. Press **Menu**.
2. Scroll < > to 'Language'.
3. Press **Select**.
4. Use the scroll < > buttons to the required language.
5. Press **Select** to save your changes.

 Advanced options




Version

 Press and hold **Menu** to display the software version on the screen.



Upgrade


 
Contact Pure technical support (<http://support.pure.com>) for more information on how to update One Mi to the latest software version.



Reset

Resetting your One Mi removes all presets and stored stations and resets all other options to default settings.

  To reset One Mi to default settings:




1. Ensure your aerial is fully extended and vertical.
2. Press and hold **Menu** until you see the software version number on screen.
3. Scroll < > to 'Reset' and press **Select**.
4. Press **Select** again to confirm that you want to reset the One Mi to default settings.


Installing a ChargePAK A1

1. Switch One Mi off and disconnect from the mains power supply.
2. Open the battery compartment (A).
3. Place the ChargePAK in the right hand end of the compartment, logo side out (B).
3. Slide the ChargePAK to the left until it clicks into place on the ChargePAK connector.
4. Replace the battery cover (C) and connect One Mi to the mains.
5. ChargePAK will begin charging.

 Note: When charging your ChargePAK for the first time or after an extended period of inactivity it is recommended that it is charged for around 24 hours to ensure full battery power. If ChargePAK is completely flat there may be a slight delay before the battery charging indicator is displayed.

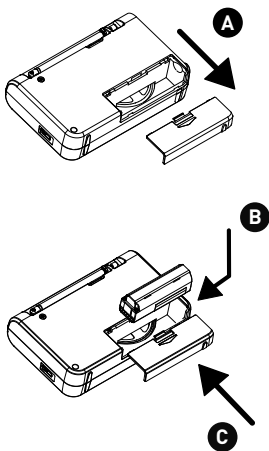

Technical specifications

Radio	Digital and FM. UK products receive DAB and FM; non-UK products receive DAB/DAB+/DMB-Radio/FM depending on region.
Frequencies	DAB Band III 174-240MHz, DAB L-Band 1452-1490MHz, FM 87.5-108MHZ.
Audio	1W RMS Full-range 2.5" drive unit.
Input Connectors	5V Mini USB power adaptor socket (also for software updates).
Output Connectors	3.5mm stereo headphone socket.
Power	230V AC to 5V (800 mA) Mini USB external power adapter or ChargePAK A1.
Power Consumption	Standby: 0.61W Active: 1.53W.
Approvals	 CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC). ETSI EN 300 401 compliant.

Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

Option 1: You can register your purchase on-line at <https://www.pure.com/au/register/register.asp>

Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.

If you have any questions about your warranty you can call us toll free:

1800 988 268

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to: <http://support.pure.com/au/> and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear.
- Products with serial number defacement, modification or removal.
- Water damage or corrosion caused by dampness.
- Any damage or deterioration due to shipments.
- Any damage or deterioration due to shipment.
- Any product which has been subjected to misuse, abuse or accident.

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202.

Pure

Imagination Technologies Ltd
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
<http://support.pure.com>

Pure Australasia Pty Ltd

PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
<http://support.pure.com/au>

PURE

www.pure.com

connect.pure.com

www.facebook.com/pure